

Bounce in Bins

In order to better serve our rental customers,

we would like you to take a moment with your delivery driver to ensure that all equipment delivered for your use is in proper working condition.

- ✓ Visually inspect inflatable item(s)
- ✓ Visually inspect concession item(s)
- ✓ Visually inspect soaker hose(s)

If you have a problem, please call us immediately.

However, some situations can be remedied by the renter if certain steps are taken.

Bounce is losing air

Be sure that the blower unit is still on and connected securely to the blower hose (by the way of tie-straps in the back of the inflatable unit).

Blower keeps turning off

Remember that inflators that inflate these units pull about 7 amps apiece and in conjunction with other items may put the circuit that they are connected to in an overload

situation causing the circuit to shut down.

REMEDY: After turning the blower off and resetting the circuit breaker, try moving the blower plug to another plug-in (preferably on another circuit); or, turn off, or unplug, other items that are operating on the same circuit.

Bounce house walls are collapsing

While the cause of collapsing walls can be an underinflated unit (in which case see the solution for *BOUNCE IS LOSING AIR*), many times the cause is too many people and too much weight. Reduce the number of people and try again.


The soaker hose is broken

When visually inspecting the inflatable unit, the driver will hook up the water and "test-drive" your soaker hose to be sure it is working. If it breaks after that time it may be the result of rough-play. Closer adult supervision may address this issue.

REMEMBER: The soaker hose is what makes our water inflatables work the way they do. Please treat these and all our rental items with respect and they will provide hours of uninterrupted entertainment.

OPERATING OUR CONCESSION ITEMS:


Cotton Candy Operation

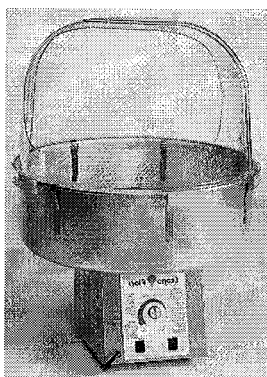

Operating the Machine:

1. With the main switch OFF, fill the floss head. Always fill it 90% full with floss sugar. This quantity is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** Excessive vibration will occur if overfilled. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.
2. **IMPORTANT:** Always turn machine off before adding more sugar.
3. Turn MAIN SWITCH and HEAT SWITCH "ON."
4. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.
5. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting.
6. If you smell burning sugar or see smoke, reduce the heat.

Snow Cone Operation:

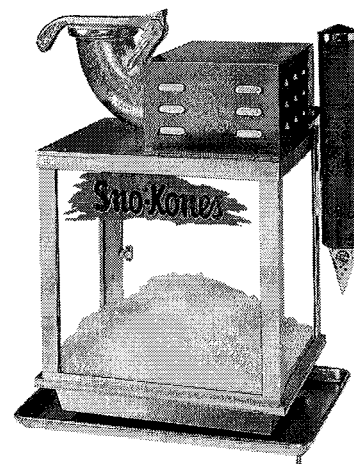

Operating the Machine:

The snow cone machine is the easiest of our concession items to operate.

1. Start with crushed ice (which can be purchased at any convenience or grocery store) or ice cubes from your refrigerator.
2. Lift the top arm and pour in your ice. When the ice chute is full, turn the motor on, grab the handle and with only slight pressure push the handle down to gently force the ice through the blades.

CAUTION: NEVER STICK YOUR HANDS OR ANY OBJECT OTHER THAN ICE INTO THIS CHUTE. Pack the ice into your cones and flavor with the provided syrup and off you go. ENJOY!